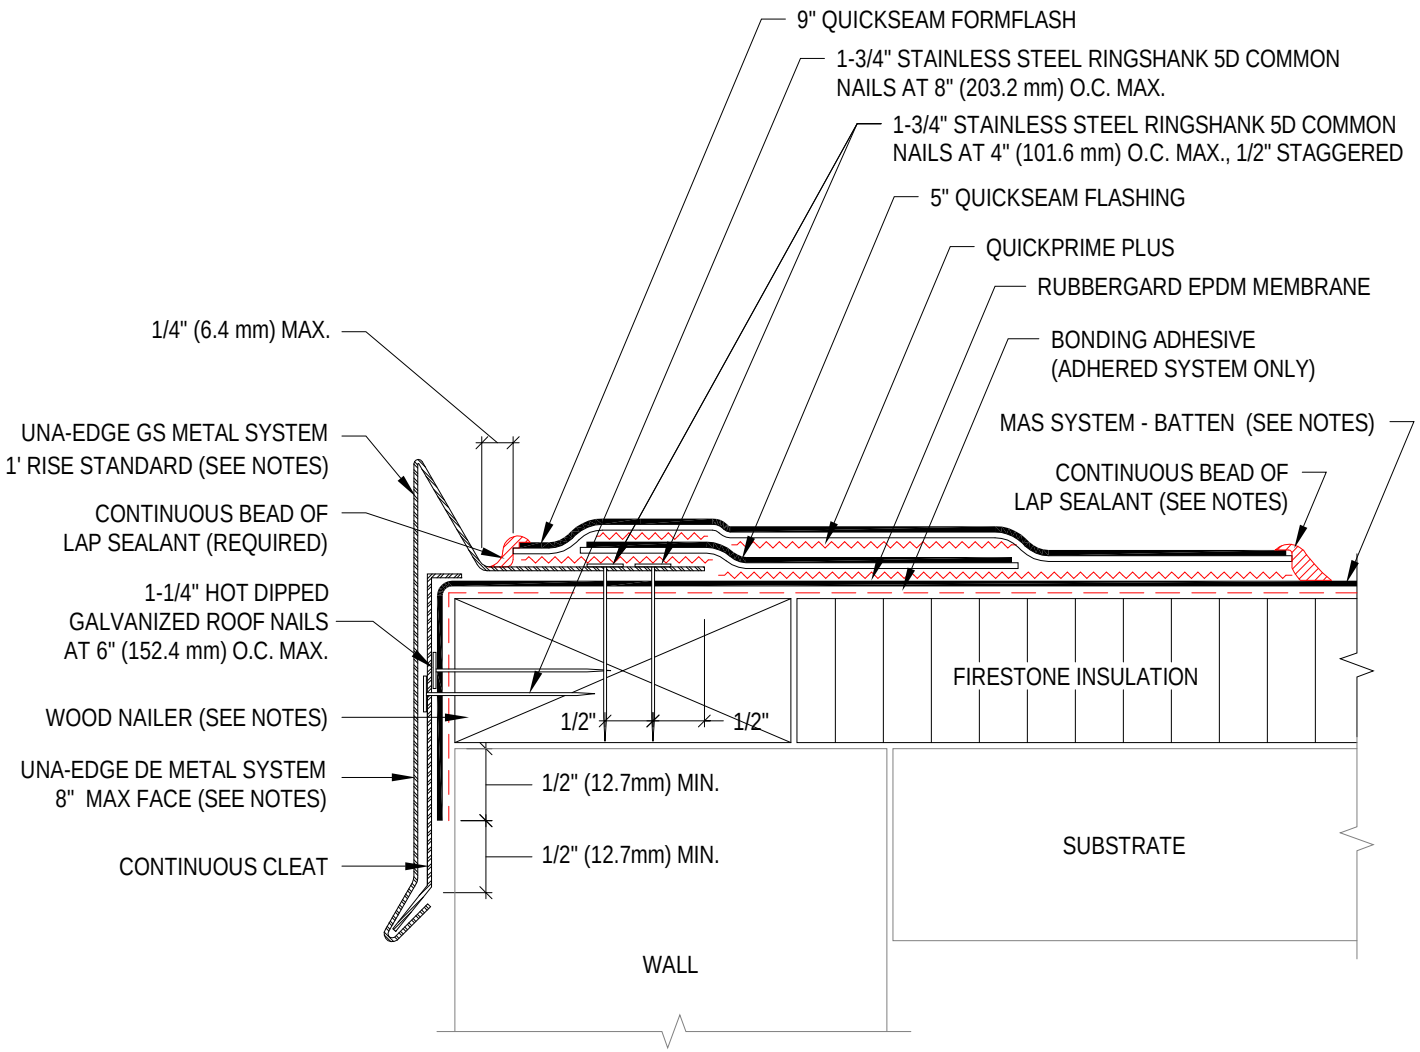

NOTES:

1. REFER TO FIRESTONE WEBSITE FOR MOST CURRENT INFORMATION.
2. INSTALL METAL WORK TO FIRESTONE INSTALLATION INSTRUCTIONS.
3. 9" QUICKSEAM FORMFLASH MUST EXTEND TO WITHIN 1/4" (6.4 mm) OF THE GRAVELSTOP RISE.
4. LAP SEALANT IS REQUIRED ALONG ENTIRE UPSLOPE EDGE OF QUICKSEAM FLASHING WHEN ROOF SLOPE IS 1" (25.4 mm) PER FOOT OR GREATER. REFER TO LS-9 FOR SEAM EDGE TREATMENT.
5. WOOD NAILER MUST BE INSTALLED TO MEET APPLICABLE BUILDING CODES OR 200 LBS PER LINEAR FOOT MINIMUM IN ANY GIVEN DIRECTION.
6. FLANGE OF METAL MUST BE FULLY SUPPORTED BY WOOD AND TERMINATED AT LEAST 1/2" (12.7 mm) FROM EDGE OF WOOD.
7. MECHANICALLY ATTACHED SYSTEMS MUST USE A BATTEN TIE-IN WITHIN 12" (304.8mm) OF OF DRIPEDGE. SEE DETAIL B-8.

MAXIMUM WARRANTY: **25 YEARS**

Firestone BUILDING PRODUCTS
NOBODY COVERS YOU BETTER.™
www.firestonebpco.com

FIRESTONE UNA-EDGE GS (GRAVELSTOP)

RubberGard™ EPDM

ACCEPTABLE SYSTEMS: ADHERED/MAS

ISSUE / REVISION DATE: 5/1/2010

NOT TO SCALE

DETAIL NO. RE-24B